


Operating Instructions

VEGASCAN 693

15-channel HART signal conditioning instrument



Contents

- 1 About this document**
 - 1.1 Function 5
 - 1.2 Target group 5
 - 1.3 Symbolism used 5

- 2 For your safety**
 - 2.1 Authorised personnel 6
 - 2.2 Appropriate use 6
 - 2.3 Warning about misuse 6
 - 2.4 General safety instructions 6
 - 2.5 CE conformity 6
 - 2.6 Safety information for Ex areas 7
 - 2.7 Environmental instructions 7

- 3 Product description**
 - 3.1 Configuration 8
 - 3.2 Principle of operation 9
 - 3.3 Adjustment 9
 - 3.4 Storage and transport 10

- 4 Mounting**
 - 4.1 General instructions 11
 - 4.2 Mounting information 11

- 5 Electrical connection**
 - 5.1 Preparing the connection 13
 - 5.2 Connection procedure 14
 - 5.3 Wiring plans 15

- 6 Setup with the integrated indicating and adjustment unit**
 - 6.1 Adjustment system 17
 - 6.2 Setup procedure 18
 - 6.3 Menu schematic 25

- 7 Setup with PACTware™**
 - 7.1 Connecting the PC 33
 - 7.2 Parameter adjustment with PACTware™ 36
 - 7.3 Setup web server/e-mail, remote enquiry 37

- 8 Application examples**
 - 8.1 Stock management of a tank farm via network 38

8.2	Stock management of several tank farms via modem	38
9	Maintenance and fault rectification	
9.1	Maintenance	40
9.2	Fault rectification	40
9.3	Instrument repair	42
10	Dismounting	
10.1	Dismounting procedure	44
10.2	Disposal	44
11	Supplement	
11.1	Technical data	45
11.2	Dimensions	48
11.3	Certificate	49

**Note:**

The operating instructions manual "RS232/Ethernet connection" as well as the additional instructions manual "Modbus-TCP, VEGA ASCII protocol" is attached to instructions with RS232/Ethernet interface. Here you will find further information for setup.

1 About this document

1.1 Function

This operating instructions manual has all the information you need for quick setup and safe operation of VEGASCAN 693. Please read this manual before you start setup.

1.2 Target group

This operating instructions manual is directed to trained personnel. The contents of this manual should be made available to these personnel and put into practice by them.

1.3 Symbolism used



Information, tip, note

This symbol indicates helpful additional information.



Caution, warning, danger

This symbol informs you of a dangerous situation that could occur. Ignoring this cautionary note can impair the person and/or the instrument.



Ex applications

This symbol indicates special instructions for Ex applications.



List

The dot set in front indicates a list with no implied sequence.



Action

This arrow indicates a single action.



Sequence

Numbers set in front indicate successive steps in a procedure.

2 For your safety

2.1 Authorised personnel

All operations described in this operating instructions manual must be carried out only by trained specialist personnel authorised by the operator. For safety and warranty reasons, any internal work on the instruments must be carried out only by personnel authorised by the manufacturer.

2.2 Appropriate use

VEGASCAN 693 is a universal signal conditioning instrument and power supply unit for connection of 15 HART sensors.

2.3 Warning about misuse

Inappropriate or incorrect use of the instrument can give rise to application-specific hazards, e.g. vessel overfill or damage to system components through incorrect mounting or adjustment.

2.4 General safety instructions

VEGASCAN 693 is a high-tech instrument requiring the strict observance of standard regulations and guidelines. The user must take note of the safety instructions in this operating instructions manual, the country-specific installation standards (e.g. the VDE regulations in Germany) as well as all prevailing safety regulations and accident prevention rules.

2.5 CE conformity

VEGASCAN 693 is in CE conformity with EMC (89/336/EWG) and NSR (73/23/EWG).

Conformity has been judged acc. to the following standards:

- EMC:
 - Emission EN 61326: 1997 (class A)
 - Susceptibility EN 61326: 1997/A1: 1998
- NSR: EN 61010-1: 2001

VEGASCAN 693 is designed for use in an industrial environment. Nevertheless, electromagnetic interference from electrical conductors and radiated emissions must be taken into account, as is usual with a class A instrument acc. to

EN 61326. If VEGASCAN 693 is used in a different environment, the electromagnetic compatibility to other instruments must be ensured by suitable measures.

2.6 Safety information for Ex areas

Please note the Ex-specific safety information for installation and operation in Ex areas. These safety instructions are part of the operating instructions manual and come with the Ex-approved instruments.

2.7 Environmental instructions

Protection of the environment is one of our most important duties. That is why we have introduced an environment management system with the goal of continuously improving company environmental protection. The environment management system is certified acc. to DIN EN ISO 14001.

Please help us fulfil this obligation by observing the environmental instructions in this manual:

- Chapter "*Storage and transport*"
- Chapter "*Disposal*"

3 Product description

3.1 Configuration

Scope of delivery

The scope of delivery encompasses:

- VEGASCAN 693 signal conditioning instrument
- Socket
- Coded pins and bridges
- RS232 modem connection cable (optional)
- Documentation
 - this operating instructions manual
 - operating instructions manual "*RS232/Ethernet connection*"
 - Additional instruction manual "*Modbus-TCP, VEGA ASCII protocol*" (optional)
 - Ex-specific safety instructions (with Ex versions) and, if necessary, further certificates

Components

VEGASCAN 693 consists of the following components:

- VEGASCAN 693 signal conditioning instrument with indicating and adjustment unit in the front
- Communication interface for VEGACONNECT (I²C)
- RS232 or Ethernet interface
- Socket

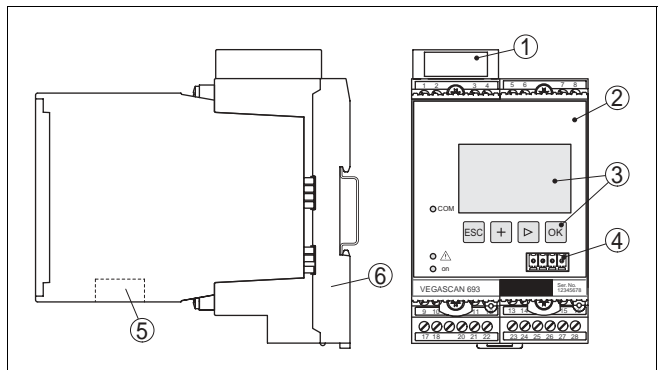


Fig. 1: VEGASCAN 693

- 1 Ex separating chamber with Ex version
- 2 VEGASCAN 693
- 3 Indicating and adjustment unit
- 4 Communication interface for VEGACONNECT (I²C)
- 5 RS232 or Ethernet interface
- 6 Socket

3.2 Principle of operation

Area of application

VEGASCAN 693 is a universal signal conditioning instrument for a number of applications such as level, gauge and process pressure measurement. At the same time, it can serve as power supply unit for connected sensors. VEGASCAN 693 is designed for connection of 15 independent VEGA HART sensors (5 with Ex applications). Hence 15 (5 with Ex) independent measurements can be carried out.

The measured values can be retrieved through one of the integrated interfaces (RS232/Ethernet) via modem or network and displayed with the web browser or Visual VEGA. Furthermore it is possible to transmit measured values or messages by e-mail. The use of VEGASCAN 693 is particularly suitable of stocktaking, VMI (Vendor Managed Inventory) and remote enquiry.

Physical principle

VEGASCAN 693 signal conditioning instrument can power the connected sensors and also evaluate their measuring signals. The requested parameter is indicated in the display and, in addition, outputted to the integrated interface and the web server for further processing. On request, the measured values can be sent event or time-controlled via e-mail to different addressees.

Power supply

Wide-range power supply unit with 20 ... 253 V AC/DC for world-wide use.

You can find detailed information on the power supply in the " *Technical data* " in the " *Supplement* ".

3.3 Adjustment

VEGASCAN 693 can be adjusted with the following adjustment media:

- the integrated indicating and adjustment unit
- an adjustment software acc. to FDT/DTM standard, e.g. PACTware™ and a Windows PC

The entered parameters are generally saved in VEGASCAN 693, when used with PACTware™ also optionally in the PC.



Information:

When PACTware™ and the corresponding VEGA-DTMs are used, additional settings can be made which are either not possible or partially restricted with the integrated indicating

and adjustment unit. If an adjustment software is used, you either need one of the integrated interfaces (RS232/Ethernet) or the interface converter VEGACONNECT.

Further instructions for setting up the web server and e-mail functions are stated in the online help of PACTware™ or the VEGASCAN 693 DTM as well as the operating instructions manual "*RS232/Ethernet connection*".

3.4 Storage and transport

Packaging

Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test acc. to DIN EN 24180.

The packaging of standard instruments consists of environment-friendly, recyclable cardboard. For special versions PE foam or PE foil is also used. Dispose of the packaging material via specialised recycling companies.

Storage and transport temperature

- Storage and transport temperature see "*Supplement – Technical data – Ambient conditions*"
- Relative humidity 20 ... 85 %

4 Mounting

4.1 General instructions

Installation location

Each series 600 instrument consists of the actual signal conditioning instrument as well as a plug-in socket for carrier rail mounting. Because it has protection class IP 30 or IP 20, the instrument is intended to be used in switching cabinets.

4.2 Mounting information

Mounting

The plug-in socket is constructed for carrier rail mounting acc. to EN 50022. Power supply is connected to terminals 17 and 18. For neighbouring series 600 signal conditioning instruments, it is possible to continue connection L1 and N directly via the supplied bridges.



Danger:

The bridges must never be used with single instruments or at the end of a row of instruments. If this rule is not heeded, there is a danger of coming into contact with the operating voltage or causing a short circuit.



A VEGASCAN 693 in Ex version is an auxiliary, intrinsically safe instrument and must not be installed in hazardous areas.

Before setup, the Ex separating chamber must be attached (as shown below) with Ex versions. Safe operation can be only ensured if the operating instructions manual and the EU type approval certificate are observed. VEGASCAN 693 must not be opened.

Instrument coding

All signal conditioning instruments are provided with different gaps dependent on type and version (mechanical coding).

The plug-in socket is provided with coded pins that can be inserted to prevent accidental interchanging of the various instrument types.



With a VEGASCAN 693 in Ex version, the supplied coded pins (type coded pin and Ex coded pin) must be inserted by the user acc. to the below chart.

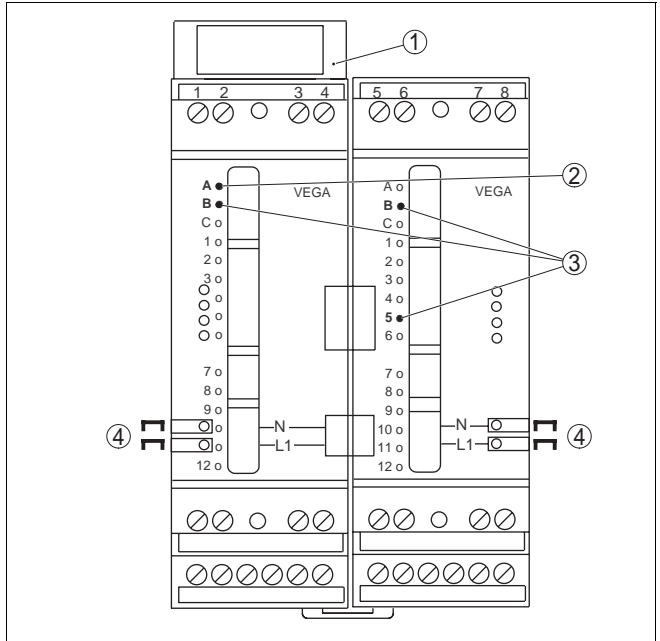


Fig. 2: Plug-in socket VEGASCAN 693

- 1 Ex separating chamber
- 2 Ex coding with Ex version
- 3 Type coding for VEGASCAN 693
- 4 Bridges for looping the power supply

5 Electrical connection

5.1 Preparing the connection

Note safety instructions

Always observe the following safety instructions:

- Connect only in the complete absence of line voltage
- If overvoltages are expected, overvoltage arresters should be installed.



Tip:

We recommend VEGA overvoltage arresters B61-300 (power supply VEGASCAN 693) and B62-36G (sensor supply).

Take note of safety instructions for Ex applications



In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units.

Select power supply

The power supply can be 20 ... 253 V AC, 50/60 Hz.

Select connection cable

Power supply of VEGASCAN 693 is connected with standard cable acc. to the national installation standards.

Standard two-wire cable with screening can be used for connecting the sensors. The screening is absolutely necessary to ensure interference-free operation with HART sensors.

Cable screening and grounding

Connect the cable screen on both ends to ground potential. In the sensor, the screen must be connected directly to the internal ground terminal. The ground terminal outside on the sensor housing must be connected to the potential equalisation.

If potential equalisation currents are expected, the screen connection on VEGASCAN 693 must be made via a ceramic capacitor (e.g. 1 nF, 1500 V). The low frequency potential equalisation currents are thus suppressed, but the protective effect against high frequency interference signals remains.

Select connection cable for Ex applications



Take note of the corresponding installation regulations for Ex applications. In particular, make sure that no potential equalisation currents flow over the cable screen. In case of grounding on both sides this can be achieved by the use of a capacitor or a separate potential equalisation.

5.2 Connection procedure



Tip:

Before the actual setup, each HART sensors must be assigned an address (see chapter "Setup"). When assigning an address, only one sensor should be connected to VEGASCAN 693. Depending on the installation location of the sensors, it can be advantageous to carry out this addressing before installing and connecting the sensors. This can be conveniently carried out e.g. in the workshop. You just need a 24 Volt power supply as well as an indicating and adjustment module PLICSCOM or the adjustment software PACTware™ with VEGACONNECT.

Move to electrical connection and proceed as follows:

- 1 Snap the socket without VEGASCAN 693 onto the carrier rail
- 2 Connect sensor cable to terminal 1/2 (active input) or 3/4 (passive input), provide a screening
- 3 When using several sockets, loop the power supply by means of bridges
- 4 Connect power supply (switched off) to terminal 17 and 18
- 5 If necessary, connect relays or other outputs
- 6 Insert VEGASCAN 693 into the plug-in socket and screw it down tightly

The electrical connection is finished.



Before setting up Ex versions, make sure the Ex separating chamber is plugged onto the left side of the housing (above the sensor terminals). The pins for type and Ex coding must also be inserted correctly.



Information:

- On the active input (terminals 1/2), VEGASCAN 693 provides the power supply for the connected sensors. Power supply and measured value transmission are carried out via the same two-wire cable. This operating mode is intended for sensors without separate power supply (sensors in two-wire version).
- On the passive input (terminals 3/4), the sensors are not powered, only the measured value is transmitted. This input is for connection of transmitters with their own,

separate power supply (sensors in four-wire version). The connection and operation in Ex ia is not permitted on the passive input.



Note:

VEGASCAN 693 is designed for connection of up to 15 HART sensors (5 with Ex). Because they are accessed via different addresses in the HART multidrop mode, all sensors must be connected to the same sensor input. These are either terminals 1/2 (active input) or terminals 3/4 (passive input). Mixed operation of active and passive input is not possible. Since this is a digital bus system, only one two-wire cable should lead to the sensors. A distributor can then be connected directly forward of the sensors. As an alternative, the connection cable can be looped via the second gland on the sensor housing.

5.3 Wiring plans

Wiring plan for two-wire sensors

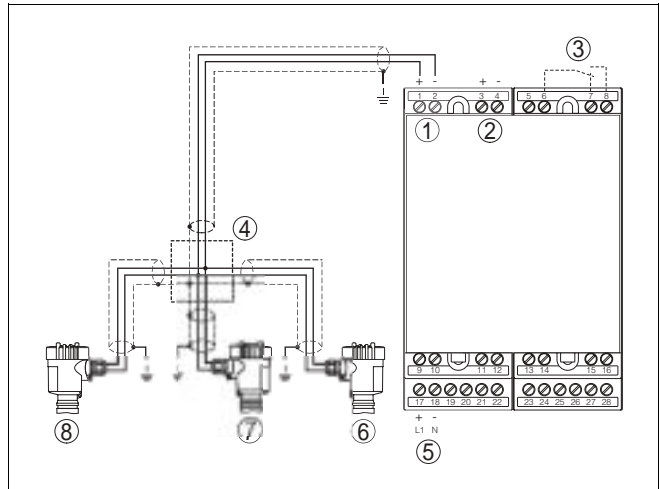


Fig. 3: Wiring example VEGASCAN 693 with two-wire sensors

- 1 Measured data input with sensor supply (active input)
- 2 Measured data input (passive input), not in Ex ia
- 3 Internal fail safe relay
- 4 Distributor
- 5 Power supply of VEGASCAN 693
- 6 HART two-wire sensor with Multidrop address 1
- 7 HART two-wire sensor with Multidrop address 2
- 8 HART two-wire sensor with Multidrop address 3

Wiring plan for four-wire sensors

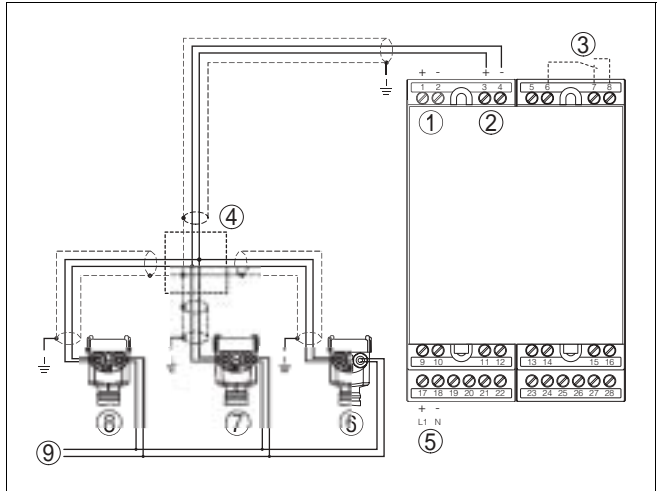


Fig. 4: Wiring example VEGASCAN 693 with four-wire sensors

- 1 Measured data input with sensor supply (active input)
- 2 Measured data input (passive input), not in Ex ia
- 3 Internal fail safe relay
- 4 Distributor
- 5 Power supply of VEGASCAN 693
- 6 HART four-wire sensor with Multidrop address 1
- 7 HART four-wire sensor with Multidrop address 2
- 8 HART four-wire sensor with Multidrop address 3
- 9 Power supply for four-wire sensors

6 Setup with the integrated indicating and adjustment unit

6.1 Adjustment system

Function

The integrated indicating and adjustment unit is used for measured value display, adjustment and diagnosis of VEGA-SCAN 693 as well as the connected sensors. Indication and adjustment are made via four keys and a clear, graphic-capable indication with background lighting. The adjustment menu with language selection is clearly structured and enables easy setup.

Certain adjustment options are not possible or are partially restricted with the integrated indicating and adjustment unit, e. g. the settings for the e-mail server. For such applications, the use of PACTware™ with appropriate DTMs is recommended.

Indicating/Adjustment elements

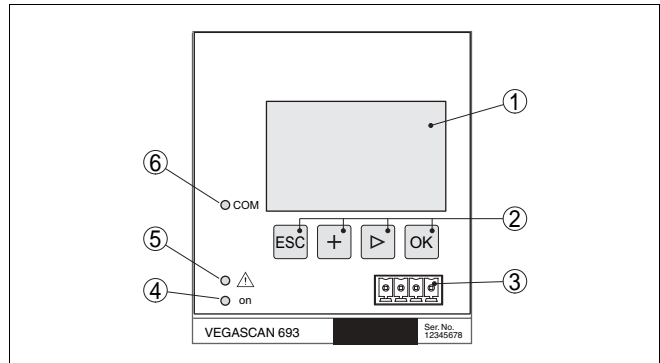


Fig. 5: Indicating and adjustment elements

- 1 LC display
- 2 Adjustment keys
- 3 Communication interface for VEGACONNECT
- 4 Status indication operation
- 5 Status indication fail safe relay
- 6 Status indication interface activity

Key functions

- **[OK]** key:
 - move to the menu overview
 - confirm selected menu
 - edit parameter
 - save value
- **[->]** key to select:
 - menu change
 - list entry

- editing position
- **[+]** key:
 - modify value of a parameter
- **[ESC]** key:
 - interrupt input
 - jump to the next higher menu

**Note:**

Approx. 10 minutes after the last pressing of a key, an automatic reset to measured value indication is triggered. Any values not confirmed with **[OK]** will not be saved.

6.2 Setup procedure

Setup

Setup encompasses mainly the selection of the application, assignment of HART addresses and adjustment of measurement loops. Scaling the measured value to the requested size and unit (possibly with the application of a linearization curve), as well as setting an integration time for smoothing the measured value, are additional setup steps.

For instruments with Ethernet interface, the instrument must be provided with the host name and IP addr./Subnet mask. If necessary, the e-mail/web server can also be configured with PACTware™.

Set HART address

VEGASCAN 693 can process measured values of several connected HART sensors. All measured values are transmitted as digital HART signals on the same cable (bus). Therefore an own, unique address (address range 1-15) must be assigned first of all to each connected sensor. This mode is also called HART Multidrop mode. Addressing can be done directly on each HART sensor via the respective adjustment unit or an appropriate adjustment software. As an alternative, the setting of the sensor address can be also carried out via the VEGAMET menu under "*Service – Sensor address*".

**Note:**

When addresses are being assigned, only one sensor with a particular address must be connected on the bus. If this is not the case, the sensor cannot be accessed and it is not possible to assign an address.

Switch on phase

After being switched on, VEGASCAN 693 first of all carries out a short self-check. The following steps are carried out:


- Internal check of the electronics

- indication of the instrument type, firmware version as well as the instrument TAG (instrument name)
- the output signals jump briefly to the set fault current


Then the current measured values will be displayed and outputted.

Measured value indication/ Main menu

The measured value indication displays three measured values each in one common window. The digital display value, the measurement loop designation (meas. loop TAG) and the unit are shown. By pushing the [\rightarrow] key, you can move to the next three measured values.

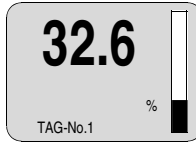


→ By pushing [**OK**] you move from the measured value indication to the main menu.

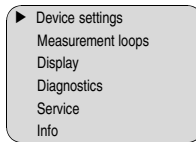

→ Select the menu item *Device settings* with [\rightarrow] and confirm with [**OK**].

Device settings – Device-TAG


You can assign an unambiguous name to VEGASCAN 693 via the Device-TAG. This function is recommended when several VEGAMETs are implemented and a good documentation of larger system is required.

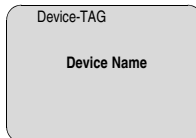

→ Enter the requested values via the appropriate keys and save your settings with [**OK**].

**Device settings – Host Name/
IP address**

For instruments with integrated Ethernet interface also a host name and the IP address must Subnet Mask for integration in the network must be entered. These specifications are available from your network administrator. These settings are only effective after a restart of VEGASCAN 693.

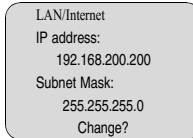

```

LAN/Internet
IP address:
192.168.200.200
Subnet Mask:
255.255.255.0
Change?
  
```

→ Enter the values via the appropriate keys and save your settings with **[OK]**. Disconnect briefly the supply voltage so that the modified settings become effective.

Device settings – Time/Date

On instruments with integrated RS232/Ethernet interface, the date and time can be entered in this menu item. These time settings are buffered for approx. 3 days in case of power loss.



```

Time/Date

8:40


28.09.2004
  
```

→ Enter the values via the appropriate keys and save your settings with **[OK]**.

Meas. loop – Input

Because VEGASCAN 693 can read the measured values of up to 15 sensors (5 with Ex), the individual sensors must be assigned to the measurement loops. After the addresses of the HART sensors are assigned, a list with the existing sensors can be prepared and displayed. Now you can assign the requested sensor to each measurement loop.


For transmission, VEGASCAN 693 must be informed which sensor value should be used for further processing. Depending on the sensor type this can be distance, pressure, interface or temperature. If a sensor can deliver two measured values, e.g. pressure and temperature with VEGABAR sensors, a separate measurement loop must be assigned for each input variable. When HART sensors of other manufacturers are connected, the options PV (Primary Value) and SV (Secondary Value) will be available. The parameter to be transmitted is stated in the operating instructions manual of the respective sensor manufacturer.

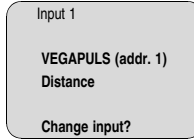

Meas. loop – Parameter

Via the parameter you inform VEGASCAN 693 of the type of measurement. The following options are available:

- Level
- Process pressure (only with VEGABAR, VEGAWELL, D-series)
- Temperature (only with VEGABAR, VEGAWELL)
- Universal (for sensors of other manufacturers)

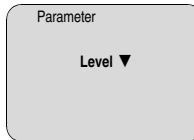


Information:


Keep in mind that some settings must be carried out individually several times, because they are specifically required for each measurement loop. This applies e.g. to the single measurement loops, the displayed values in the display as well as the outputs.

Meas. loop – Adjustment


The unit of measurement must be selected before starting the adjustment. Depending on the connected instrument this can be e.g. m(d), ft(d), bar, psi, °C or %.

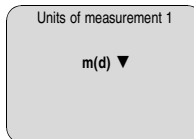

The following illustrations and examples relate to the min./max. adjustment of a radar sensor.

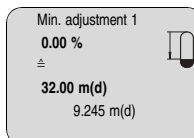


- With **[OK]** you prepare the percentage value for editing, with **[->]** you set the cursor to the requested position. Set the requested percentage value with **[+]** and save with **[OK]**. The cursor jumps now to the distance value.
- Enter now the appropriate distance value in m [m(d)] (corresponding to the percentage value) for the empty vessel (e.g. distance from the sensor to the vessel bottom).
- Save the settings with **[OK]** and move to "Max. adjustment" with **[->]**.

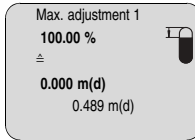

- As previously described, enter now the percentage value for the max. adjustment and confirm with **[OK]**.
- Enter now the appropriate distance value in m [m(d)] (corresponding to the percentage value) for the full vessel. Keep in mind that the max. level must be below the radar antenna.
- Finally save your settings with **[OK]**, the adjustment is finished.

Meas. loop – Damping

To suppress fluctuation in the measured value display, e.g. caused by an agitated product surface, an integration time can be set. This time can be between 0 and 999 seconds. Keep in mind, that this setting will increase the reaction time of the measurement and that the reaction to quick changes of the measured value will be delayed. In general, a time of a few seconds is sufficient to smooth the measured value display.

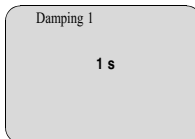


- Enter the requested parameter via the appropriate keys and save your settings with **[OK]**.

Meas. loop – Linearization curve

A linearization is necessary for all vessels in which the vessel volume does not increase linearly with the level, e.g. with a cylindrical or spherical tank. Corresponding linearization


curves are preprogrammed for these vessels. They represent the correlation between the level percentage and vessel volume. By activating the appropriate curve, the volume percentage of the vessel is displayed correctly. If the volume should not be displayed in percent but e.g. in l or kg, a scaling can be also set.

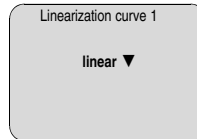

→ Enter the requested parameter via the appropriate keys and save your settings with **[OK]**.

Meas. loop – Scaling


Scaling is the conversion of the measured value into a certain parameter or measuring unit. Instead of the percentage value, the volume can be displayed, e.g. in l. Indicating values between max. -99999 and +99999 are possible.

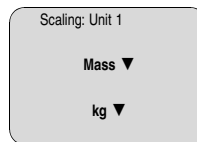

→ Enter the requested parameter via the appropriate keys and save your settings with **[OK]**.

Meas. loop – Meas. loop TAG


In this menu item you can enter an unambiguous designation for each measurement loop, e.g. the measurement loop name or the tank or product designation. In digital systems and in the documentation of larger plants, a unique designation should be entered for exact identification of individual measuring sites.

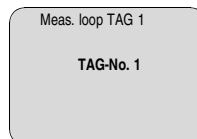

→ Enter the requested parameter via the appropriate keys and save your settings with **[OK]**.

Display


In the menu item "Display", you can set the requested displayed value for the measurement loop.

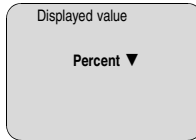

→ Enter the requested parameter via the appropriate keys and save your settings with **[OK]**.

Diagnostics

If the instrument displays a fault, further information can be retrieved via the menu item "*Diagnostics – Device status – Add. information*".

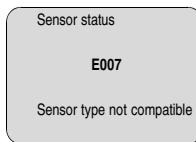

Service

The service menu contains the following settings:

- Simulation of the measured value
- Reset
- Set display language
- PIN to block the menu
- Change HART sensor address

→ Enter the requested parameter via the appropriate keys and save your settings with **[OK]**.

Service – Change sensor address

Under this menu item you can assign and modify the HART addresses of the connected sensors.



Note:

When addresses are being assigned, only one sensor with a particular address must be connected on the bus. If this is not the case, the sensor cannot be accessed and it is not possible to assign an address.

Set the current HART address of the requested sensor in the menu item "*Previous address*". The default setting of all supplied VEGA sensors is always **00**. After pushing the **[→]** key, you can assign the requested HART address in the range of 01 – 15 in the menu "*New address*". Make sure that no address is assigned twice.



Sensor address

New address:

01

Info

In the menu item "Info" the following information is available:

- Sensor type and serial number
- Date of manufacture and software version
- Date of last change using PC
- Details of VEGASCAN 693
- MAC address (with interface option Ethernet)

Further settings

Additional adjustment and diagnostics options are available via the Windows software PACTware™ and the suitable DTM. Connection can be made via the interface converter VEGA-CONNECT or RS232/Ethernet (depending on the instrument version). Further information is available in chapter "*Parameter adjustment with PACTware™*", in the online help of PACTware™ or the DTM as well as in the operating instructions manual "*RS232/Ethernet connection*".


6.3 Menu schematic




Information:

Depending on the version and application, the highlighted menu windows are not always available.


Device settings

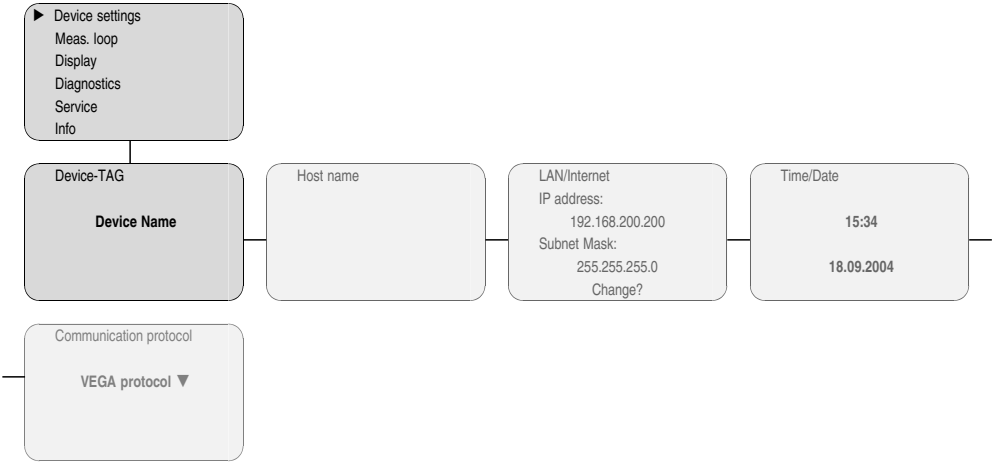


Meas. loop – Input

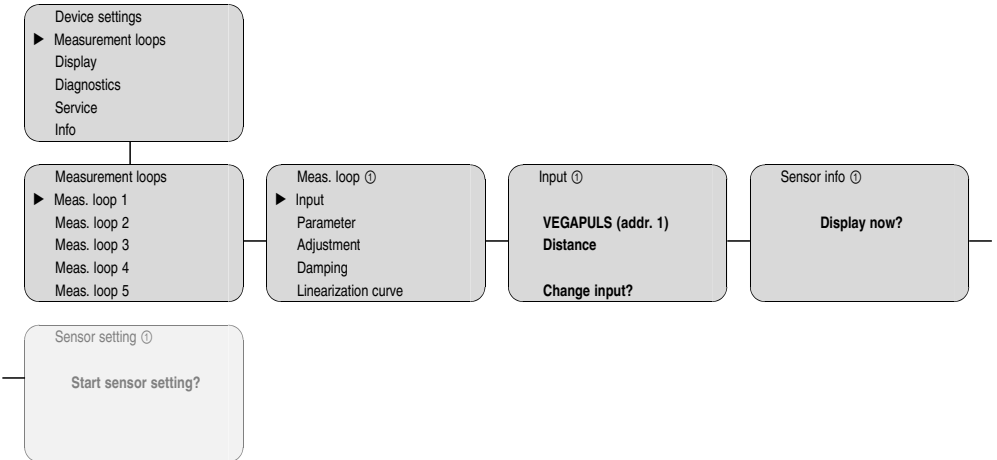


Meas. loop – Change input

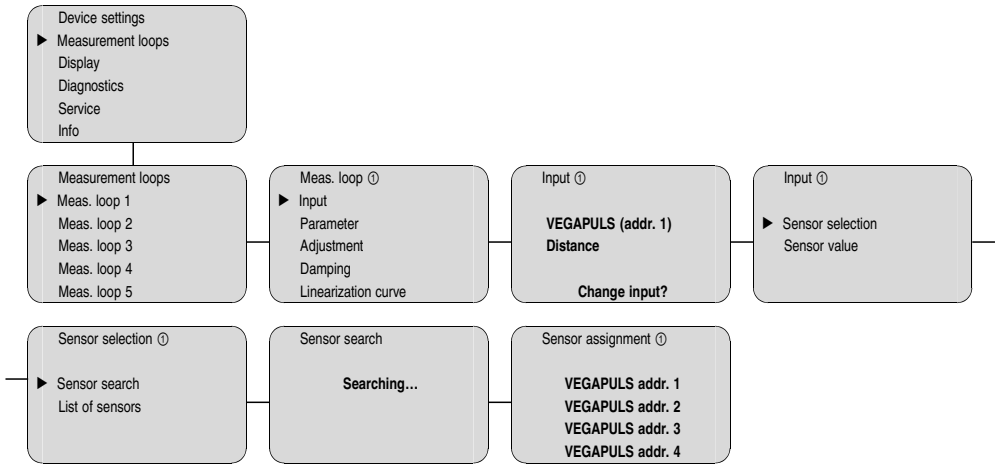


Meas. loop – Parameter

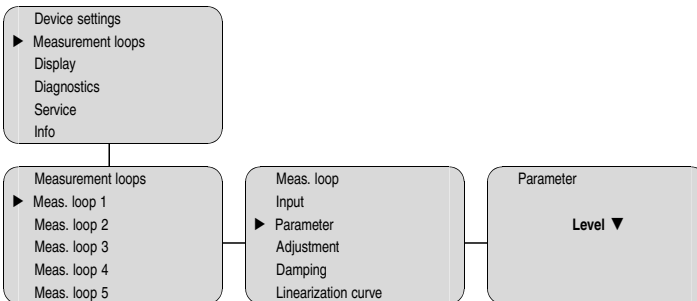


Meas. loop – Adjustment

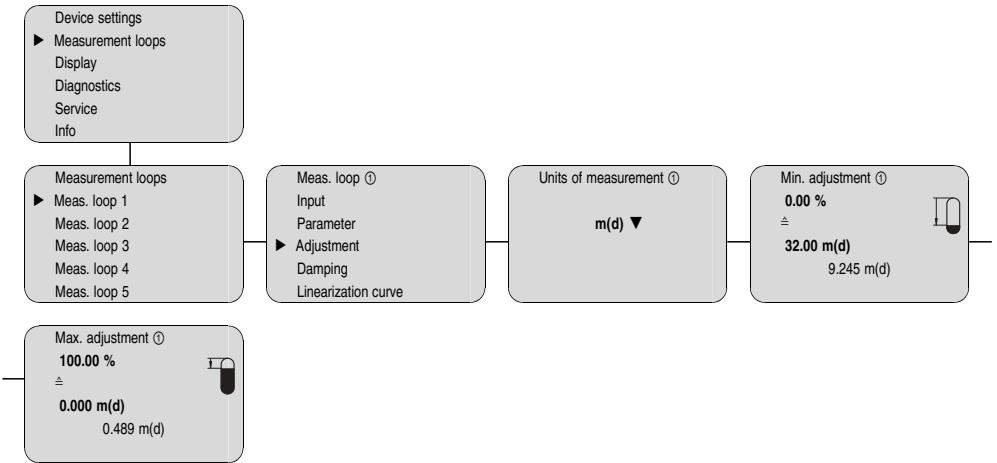


Meas. loop – Damping

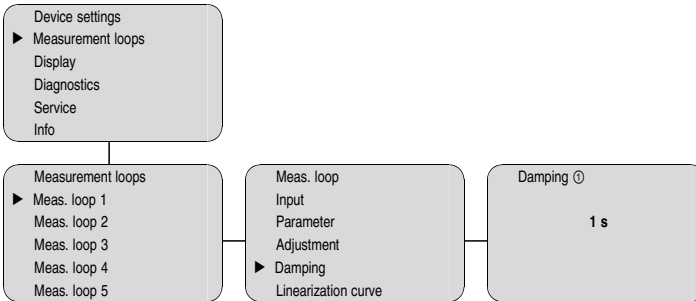


Meas. loop – Linearization curve

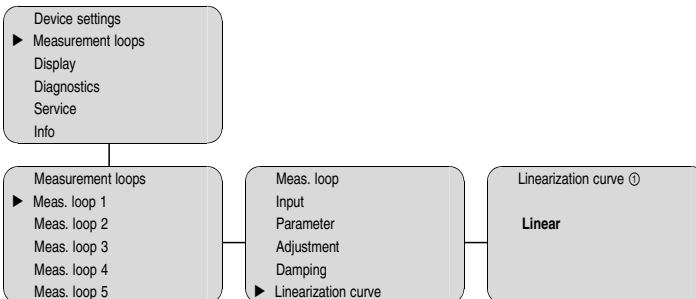


Meas. loop – Scaling

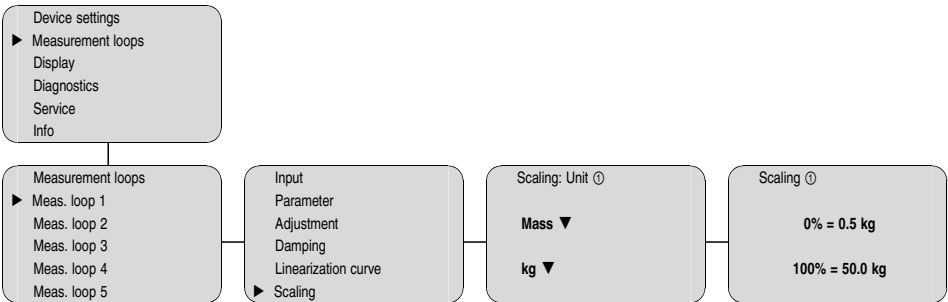


Meas. loop – Meas. loop TAG

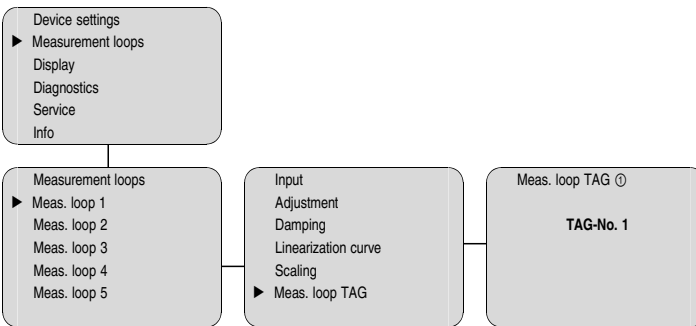


Display

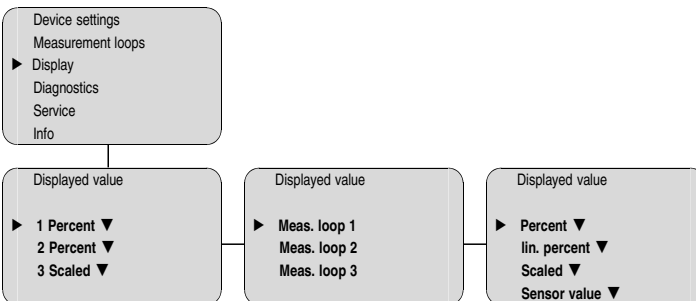


Diagnostics

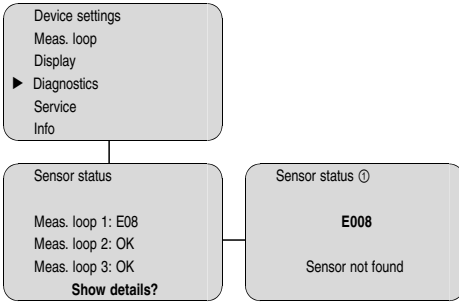


Service

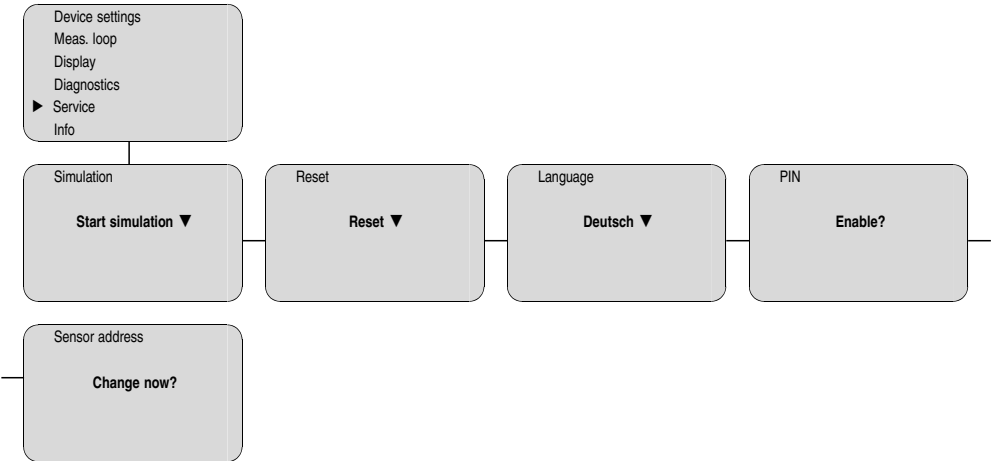

Service – Simulation

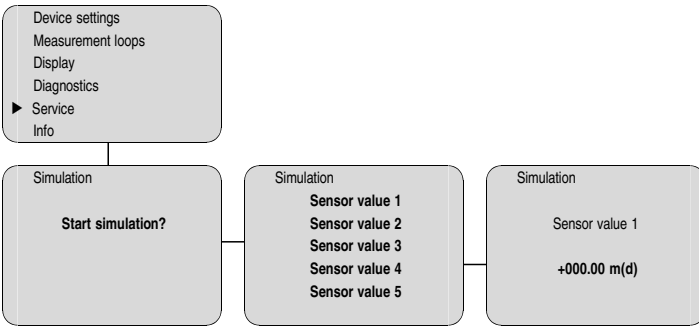

Service – Sensor address

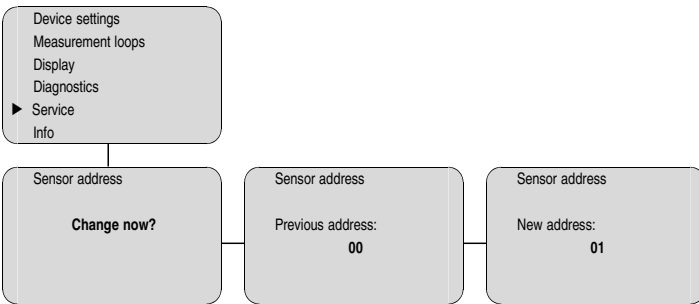

Info

Device settings
 Meas. loop
 Display
 Diagnostics
 Service
 ▶ Info

Sensor type
VEGASCAN 693
 Serial number
12345678

Date of manufacture
03. September 2004
 Software version
1.20

Date of last change using PC
04. September 2004

VEGASCAN details
Display now?

MAC address
00:30:87:D7:E8:E7

7 Setup with PACTware™

7.1 Connecting the PC

Connecting the PC via VEGA-CONNECT

For temporary connection of the PC, e.g. for parameter adjustment, the connection can be made via the interface converter VEGACONNECT. The necessary I²C interface in the front of VEGASCAN 693 is available with all instrument versions. On the computer, connection is made via the RS232 interface. If this is not available on your PC or already occupied, it is also possible to use a USB – RS232 adapter (e.g. article no. 2.26900).

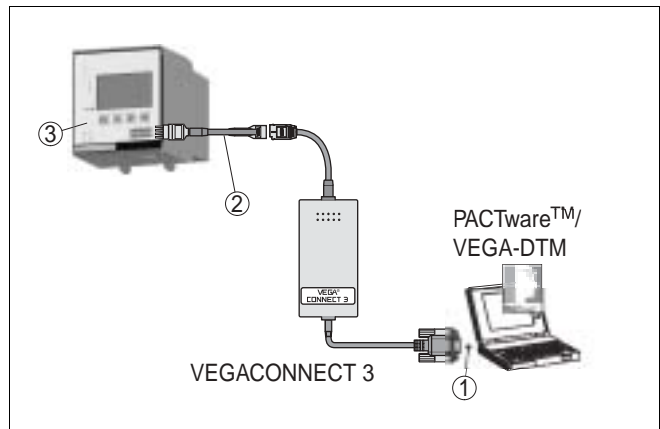


Fig. 6: Connection via VEGACONNECT

- 1 RS232 interface of the PC
- 2 I²C adapter cable for VEGACONNECT 3 (article no. 2.27323)
- 3 VEGASCAN 693

Connection of the PC via RS232

Via the RS232 interface, direct parameter adjustment and measured value enquiry of the instrument can be carried out via PACTware™. Use the RS232 modem connection cable that is supplied with the instrument and an additionally connected interlink cable (e.g. article no. LOG571.17347). To reduce EMC interference, you should mount the supplied ferrite bead on the RS232 modem connection cable.

If there is no RS232 interface on the PC or if the interface is already occupied, it is also possible to use a USB – RS232 adapter (e.g. article no. 2.26900).

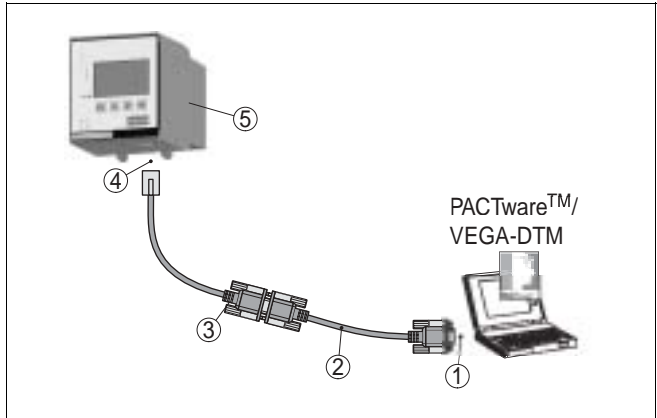


Fig. 7: Connection of the PC via RS232

- 1 RS232 interface of the PC
- 2 RS232 interlink cable (article no. LOG571.17347)
- 3 RS232 modem connection cable (in the scope of delivery)
- 4 RS232 interface of VEGASCAN 693
- 5 VEGASCAN 693

Connection of the modem via RS232

The RS232 interface is particularly suitable for easy modem connection. For this purpose, external analogue, ISDN and GSM modems with standard interface can be used. The necessary RS232 modem connection cable is supplied with VEGASCAN 693 To reduce EMC interference, you should mount the supplied ferrite bead on the RS232 modem connection cable. Remote enquiry and processing of the measured values is now possible via the software "Visual VEGA". Alternatively, independent, time or event-controlled transmission of measured values via e-mail is also possible. In addition, a remote parameter adjustment of VEGASCAN 693 and the connected sensors is possible with PACTware™.

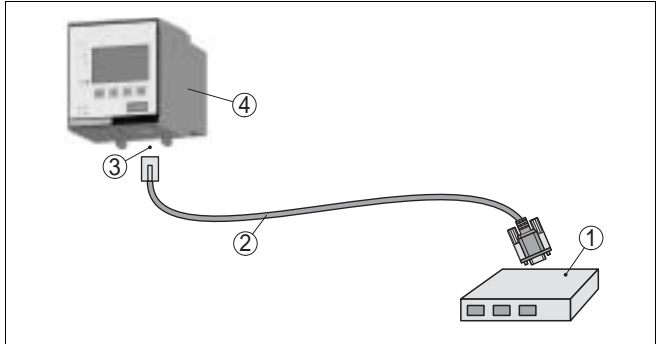


Fig. 8: Connection of the modem via RS232

- 1 Analogue, ISDN or GSM modem with RS232 interface
- 2 RS232 modem connection cable (in the scope of delivery)
- 3 RS232 interface of VEGASCAN 693
- 4 VEGASCAN 693

Connection of the PC via Ethernet

With the Ethernet interface, VEGASCAN 693 can be connected directly to an existing PC network. Any standard patch cable can be used. When connecting a VEGASCAN 693 directly to the PC, a cross-over cable must be used. To reduce EMC interference, you should mount the supplied ferrite bead on the Ethernet connection cable. Each VEGASCAN 693 then gets its own IP address under which it can be accessed from anywhere in the network. The parameter adjustment of the instrument via PACTware™ can be carried out from any PC. The measured values can be made available to individual users within the company network as HTML chart. Alternatively, independent, time or event-controlled transmission of measured values via e-mail is also possible.

For more comprehensive requirements, we recommend using the software " Visual VEGA " for measured value enquiry and visualisation.



Note:

To adjust with PACTware™ and DTM, a suitable IP address must be available in the instrument. Each instrument is preset to address 192.168.200.200. Enter the address and subnet mask corresponding to your network directly via the keyboard. Briefly interrupt the power supply, then the instrument is accessible via its IP address everywhere in the network. In addition, this information must be entered in the DTM (see chapter "Parameter adjustment with PACTware™").

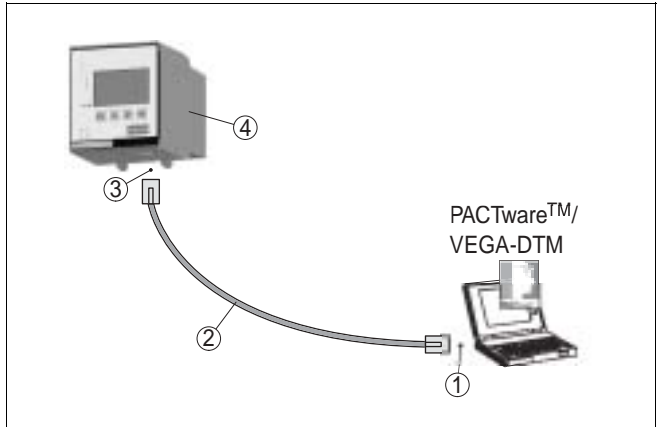


Fig. 9: Connection of the PC via Ethernet

- 1 Ethernet interface of the PC
- 2 Ethernet connection cable (patch cable)
- 3 Ethernet interface of VEGASCAN 693
- 4 VEGASCAN 693

7.2 Parameter adjustment with PACTware™

VEGASCAN 693 signal conditioning instrument can be operated via a Windows PC. You will need the configuration software PACTware™ and a suitable instrument driver (DTM) acc. to the FDT standard. In addition, the VEGA DTMs can be integrated in other frame applications acc. to FDT standard. For connection either the interface converter VEGACONNECT or one of the offered interfaces (Ethernet/RS232) in VEGASCAN 693 is required. Not only VEGASCAN 693 itself, but also connected VEGA HART sensors can be accessed.

When connecting via Ethernet, VEGASCAN 693 must be provided with a suitable IP address and subnet mask. This information must be entered additionally in the DTM. Click in the project window with the right mouse key to the VEGA Ethernet DTM and choose "Add. functions – Modify DTM addresses").



Note:

Connection of VEGACONNECT or a HART modem directly to the 4 ... 20 mA sensor cable is not possible.

All currently available VEGA DTMs are combined under the name "DTM Collection" with the current PACTware™ version on CD. They are available from the responsible VEGA agency

for a token fee. The basic version of this DTM Collection incl. PACTware™ is available as a free-of charge download from our homepage "www.vega.com".

The professional version also includes saving and printing of project documentation. A DTM licence for the appropriate instrument family can be purchased from the responsible VEGA agency.

Further setup steps are described in the operating instructions manual "*DTM-Collection/PACTware™*" attached to each CD and which can also be downloaded from the Internet. A detailed description is available in the online help of PACTware™ and the VEGA DTMs as well as in the operating instructions manual "*RS232/Ethernet connection*".

**Information:**

Keep in mind that for parameter adjustment of a VEGASCAN 693, DTM Collection 10/2004 or a newer version is required.

7.3 Setup web server/e-mail, remote enquiry

The setup and application examples of the web server, e-mail functions as well as Modbus TCP are listed in the separate operating instructions manual "*RS232/Ethernet connection*". This manual is attached to each instrument with RS232 or Ethernet interface. There you will also find the visualisation and remote enquiry with the "*Visual VEGA*" software.

8 Application examples

8.1 Stock management of a tank farm via network

Requirement

The stock of a tank farm should be measured and monitored continuously. The measured values should be made available to the scheduler and the sales department. A message should be also triggered automatically if a certain level is decreased.

Solution

One or several VEGASCAN 693 with Ethernet interface scan the connected HART sensors at regular intervals. The measured values are processed in VEGASCAN 693 and transferred to the integrated web server in the requested form and meas. unit. The measured values can be now displayed to the individual user within the company network. In addition, the necessary min. quantity for each vessel is entered. Via the integrated mail server, an e-mail is sent to the appropriate person via the company-internal mail system if the level falls below the specified value.

Setup

- Connection of the sensors and VEGASCAN 693
- Assignment of sensor HART addresses
- Input of IP address, Host name, Date/Time on VEGASCAN 693
- Installation of PACTware™ and DTM on any individual network PC
- Parameter adjustment of the sensors (e.g. false echo memory) via PACTware™
- Parameter adjustment of VEGASCAN 693 (adjustment, scaling, linearization) via PACTware™
- Setup of the web and mail server (see DTM online help)
- Indication of the measured values in a web browser by entering the IP address of VEGASCAN 693

8.2 Stock management of several tank farms via modem

Requirement

A supplier wants to count the stock of the tank farms of his customers and supply them automatically, if necessary. Via an indication (updated several times a day) and access to the levels of the previous days and weeks, the requirement/consumption of his customers should be estimated and the deliveries planned accordingly. This ensures foresighted purchasing and better utilization of the trucks. In addition, a message should be sent if the levels fall below certain predefined minimum values. By doing this, he can guarantee

his customers a continuous supply of raw materials for production processes, without the customer having to take care of the purchase and ordering. This ensures better customer loyalty and continuous orders.

Solution

A VEGASCAN 693 with standard interface and modem (conventional telephone network or GSM) is installed at every customer location. From the supplier's location, VEGASCAN 693 contacts at regular, predefined intervals all signal conditioning instruments and retrieves the current measured values. The indication receives the current levels of each customer as well as the values of the past 30 days in a line graph. Via the network, any number of persons can have these values displayed at their workplace with Visual VEGA (server/client principle). A certain measured value threshold is defined for each measurement loop in Visual VEGA. If this threshold is underrun, Visual VEGA generates an appropriate message on the PC, on request also an e-mail to certain persons.

9 Maintenance and fault rectification

9.1 Maintenance

When used as directed in normal operation, VEGASCAN 693 is completely maintenance-free.

9.2 Fault rectification

Causes of malfunction

VEGASCAN 693 offers maximum reliability. Nevertheless faults can occur during operation. These may be caused by the following, e.g.:

- Measured value of the sensor not correct
- Power supply
- Interference on the cables

Fault rectification

The first measures to be taken are to check the input/output signals as well as to evaluate the error messages via the display. The procedure is described below. Further comprehensive diagnostics can be carried out on a PC with the software PACTware™ and the suitable DTM. In many cases, the causes can be determined in this way and faults can be rectified.

24 hour service hotline

Should these measures not be successful, please call in urgent cases the VEGA service hotline under the phone number **+49 1805 858550**.

The hotline is available to you 7 days a week round-the-clock. Since we offer this service world-wide, the support is only available in the English language. The service is free of charge, only the standard telephone costs will be charged.

Fault messages

? E003

- CRC-error
- Carry out a reset
- Return instrument for repair

? E007

- Sensor type not compatible
- Search for the sensor and allocate it under *Meas. loop* – *Input*

? E008

- Sensor not found
- Check connection of the sensor
- Check HART address of the sensor

? E013

- Sensor signals failure/no valid measured value
- Check sensor parameter adjustment
- Return sensor for repair

? E016

- Empty/full adjustment reversed
- Carry out a fresh adjustment

? E017

- Adjustment span too small
- Carry out a fresh adjustment and increase the distance between min. and max. adjustment

? E021

- Scaling span too small
- Carry out a fresh scaling, increase the distance between min. and max. scaling.

? E030

- Invalid measured value
- Check sensor parameter adjustment

? E034

- EEPROM defective
- Carry out a reset
- Return instrument for repair

? E035

- EEPROM CRC-error
- Carry out a reset
- Return instrument for repair

? E036

- Instrument software not executable (during software update or after failed update)
- wait until software update is finished
- Carry out another software update

? E053

- Sensor measuring range not read correctly
- HART communication error: Check sensor cable and screening

? E104

- Measurement loop deactivated
- Activate measurement loop (allocation of a sensor to a measurement loop)

9.3 Instrument repair

If it is necessary to repair VEGASCAN 693 please proceed as follows:

You can download a return form (23 KB) from our homepage www.vega.com under: "*Services – Downloads – Forms and Certificates – Repair form*".

By doing this you help us carry out the repair quickly and without having to call back for needed information.

- Print and fill out one form per instrument
- Clean the instrument and pack it damage-proof
- Attach the completed form and possibly also a safety data sheet to the instrument.

- Send the instrument to the respective address of your agency. In Germany to the VEGA headquarters in Schiltach.

10 Dismounting

10.1 Dismounting procedure

**Warning:**

Before dismounting, be aware of dangerous process conditions such as e.g. pressure in the vessel, high temperatures, corrosive or toxic products etc.

Take note of chapters "*Mounting*" and "*Connecting to power supply*" and carry out the listed steps in reverse order.

10.2 Disposal

VEGASCAN 693 consists of materials which can be recycled by specialised recycling companies. We have purposely designed the electronic modules to be easily separable. Mark the instrument as scrap and dispose of it according to government regulations (electronic scrap ordinance, ...).

Materials: see "*Technical data*"

If you cannot dispose of the instrument properly, please contact us about disposal methods or return.

11 Supplement

11.1 Technical data

General data

Series	module unit with plug-in socket for mounting on carrier rail 35x7.5 acc. to EN 50022
Dimensions	W = 72 mm (2.83 in), H = 118.5 mm (4.66 in), D = 134 mm (5.28 in)
Weight	approx. 500 g (1.10 lbs)
Housing materials	Noryl SE100, Lexan 920A
Socket materials	Noryl SE100, Noryl SE1 GFN3
Screw terminals	max. wire cross section 1.5 mm ²

Power supply

Operating voltage	20 ... 253 V AC/DC, 50/60 Hz
Power consumption	12 VA; 7.5 W (10 VA; 5.5 W with Ex)

Sensor input

Number of sensors	15x VEGA HART sensors (5x with Ex version)
Kind of input (selectable)	
– active input	sensor power supply by VEGASCAN 693
– passive input	sensors have an own power supply
Measured value transmission	
– HART protocol (Multidrop)	digital for VEGA HART sensors
Terminal voltage	
– non-Ex version	approx. 22 V with 15 sensors (60 mA)
– Ex version	approx. 15 V with 5 sensors (20 mA)
Current limitation	approx. 85 mA (approx. 26 mA with Ex)
Adjustment range HART sensor	
– Adjustment range	±10 % of sensor measuring range
– min. adjustment delta	0.1 % of sensor measuring range
Connection cable	2-wire screened standard cable

Fail safe relay

Contact	floating spdt
Contact material	AGSNO2 hard gold-plated
Turn-on voltage	min. 10 mV DC, max. 250 V AC/DC
Switching current	min. 10 µA DC, max. 3 A AC, 1 A DC
Breaking capacitance	max. 750 mW, max. 750 VA, 18 W with U = 60 V DC; 40 W with U ≤ 40 V DC

Ethernet interface

Quantity	1x, cannot be combined with RS232
Data transmission	10/100 Mbit
Plug connection	RJ45

RS232 interface

Quantity	1x, cannot be combined with Ethernet
Plug connection	RJ45 (modem connection cable on 9-pole D-SUB in the scope of delivery)

Displays

Measured value indication	
– graphic-capable LC display (50x25 mm), background lightning	digital and quasianalogue indication
– max. indicating range	-99999 ... 99999
LED displays	
– status indication operating voltage	1x LED green
– Status indication fault signal	1x LED red
– Status indication interface activity	1x LED green

Adjustment

Adjustment elements	4x keys in the front for menu adjustment
---------------------	--

Ambient conditions

Ambient temperature	-20 ... +60°C (-4 ... +140°F)
Storage and transport temperature	-40 ... +80°C (-40 ... +176°F)

Electrical protective measures

Protection instrument	IP 30
Protection plug-in socket	IP 20
Overvoltage category	II
Protection class	II

Electrical separating measures

Reliable separation acc. to VDE 0106 part 1 between power supply, sensor input and digital part	
– Reference voltage	250 V
– insulation resistance	3.75 kV

Galvanic separation between relay output and digital part

- Reference voltage 250 V
- insulation resistance 4 kV

Potential separation between Ethernet interface and digital part

- Reference voltage 50 V
- insulation resistance 1 kV

Potential separation between RS232 interface and digital part

- Reference voltage 50 V
 - insulation resistance 50 V
-

Approvals¹⁾

ATEX II (1) GD, [Ex ia] IIC

¹⁾ Deviating data with Ex applications: see separate safety instructions.

11.2 Dimensions

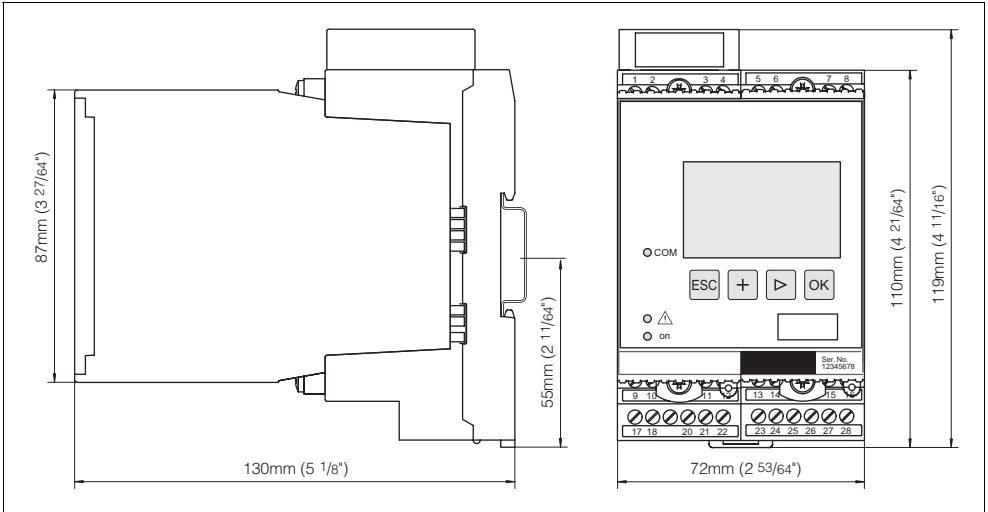


Fig. 10: Dimensions VEGASCAN 693

11.3 Certificate

CE declaration of conformity



Fig. 11: CE declaration of conformity



VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany
Phone +49 7836 50-0
Fax +49 7836 50-201
E-mail: info@de.vega.com
www.vega.com



All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.